


Universal Starter

Directions For Application

Prepare the deck and apply the underlayment, drip edge and other roof system components, consistent with good roofing practice and as indicated in the instructions provided with the covering shingle.


Unless directed otherwise, remove 7-1/2" from the end. Place the piece at the lower corner of the deck with the sealant stripe up, overhanging the drip edge 1/4" to 3/8" at the rake and eave. (If the drip edge is "D" metal, the starter can be applied flush to the edge of the metal lip). The sealant stripe should be at the eave.

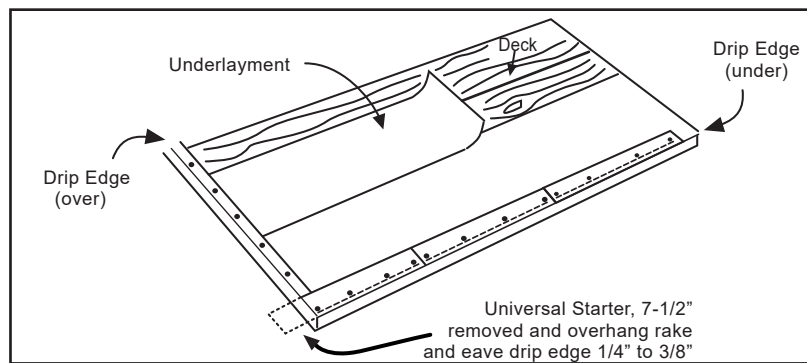

Attach with 4 nails at least 1" long, placed just above the sealant stripe. Finish across the deck with full length pieces.

Special High Wind Application:

For areas where local knowledge indicates exposure to high wind is likely or where required by the building code, these starter shingles must be applied with 6 nails. See the figure below for nail positions

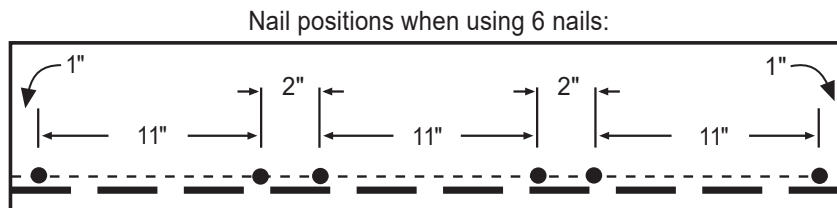

The PABCO® Limited Shingle Warranty

PABCO warrants that our shingles are free from manufacturing defects that adversely affect their performance. PABCO is not responsible for failures of any roof system that are not directly attributable to a PABCO product. See the PABCO Limited Shingle Warranty for details, limits, and conditions.



1476 Thorne Road Tacoma, WA 98421
253.272.0374 www.pabcoroofing.com