


PARAMOUNT® STARTER

Directions For Application

Prepare the deck as directed on the PARAMOUNT® shingle package.

The First Starter Course is started with PABCO® Universal Starter. Remove 7-1/2" from the end. Place the piece at the lower corner of the deck with the sealant stripe up, overhanging the drip edge 3/8" at the rake and eave.

PABCO® recommends the use of nails. Attach with 4 nails at least 1" long, placed just above the sealant stripe. Finish across the deck with full length pieces.

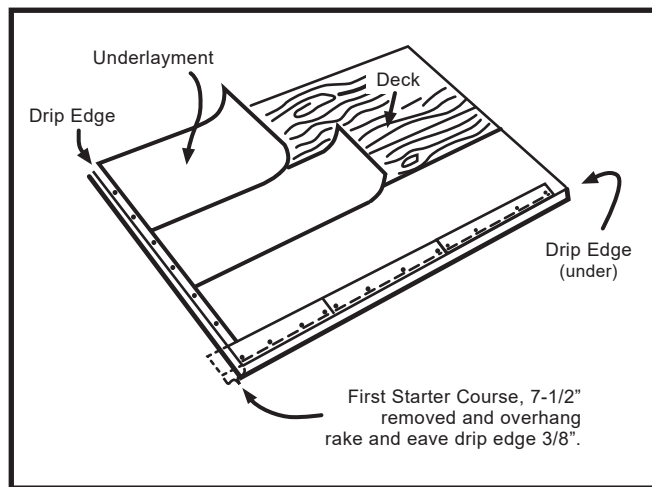


The Second Starter Course is started with a piece of PARAMOUNT® STARTER matching the color of PARAMOUNT for the rest of the roof. Remove 5-3/4" from the end. Place the piece at the lower corner of the deck. Align the piece with the First Starter Course.

Attach with 4 nails at least 1" long, placed in the nail area. For application in high wind areas, use 6 nails. The nail area is the area above the shadow line (darker band of granules) and below the sealant stripe.


NAILS MUST BE ABOVE THE SHADOW LINE.

Finish across the deck with full length pieces.

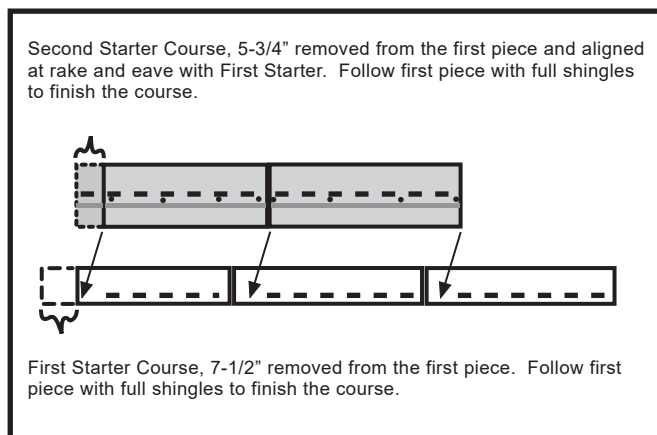

The First PARAMOUNT® Course is started with a full PARAMOUNT Shingle. Place the shingle at the lower corner of the deck. Align the end and the bottom of the shingle teeth with the Second Starter Course.

Attach with 5 nails, placed in the nail zone. The nail zone is a band of light colored granules running across the face of the shingles 9-1/2" to 11" up from the leading edge of the teeth. Follow the instructions for diagonal application found on the shingle bundle.

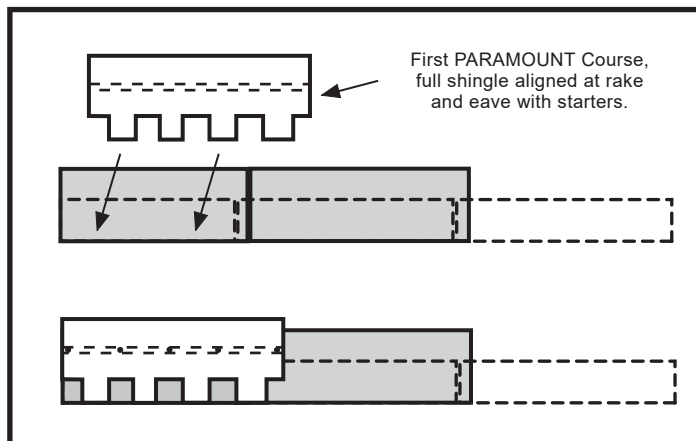

The PABCO® Limited Shingle Warranty

PABCO warrants that our shingles are free from manufacturing defects that adversely affect their performance. PABCO is not responsible for failures of any roof system that are not directly attributable to a PABCO product. See the PABCO Limited Shingle Warranty for details, limits, and conditions.



1476 Thorne Road Tacoma, WA 98421
253.272.0374 www.pabcoroofing.com